# Honeywell

## Torque Watch® Gauge Series 366

User Instructions

Item No.: 1103700 Rev. B





he Series 366 Torque
Watch® Gauges are small
lightweight instruments
designed for measurement of
very low values of static torque
typically encountered in miniature rotating mechanical systems.

The Series 366 Torque Watches utilize a calibrated helical spring, shaft, and pointer assembly mounted in jeweled bearings to minimize friction.

The 366 series covers a wide range of small torque values. See Table 1 for range, and accuracy.

| Torque Range & Accuracy* |                      |          |  |
|--------------------------|----------------------|----------|--|
| Model                    | Torque Range         | Accuracy |  |
| 366-0                    | 0.06 - 0.6 oz. in.   | ± 5%     |  |
| 366-1                    | 0.03 - 0.3 oz. in.   | ± 5%     |  |
| 366-2                    | 0.01 - 0.10 oz. in.  | ± 10%    |  |
| 366-3                    | 0.003 - 0.03 oz. in. | ± 10%    |  |
| 366-OM                   | 6 - 42 gm cm         | ± 5%     |  |
| 366-1M                   | 3 - 21 gm cm         | ± 5%     |  |
| 366-2M                   | 1 - 7.5 gm cm        | ± 10%    |  |
| 366-3M                   | 0.2 - 2.0 gm cm      | ± 10%    |  |
| 366-OSI                  | 0.4 - 4.0 N-M        | ± 5%     |  |
| 366-1SI                  | 0.2 - 2.0 N-M        | ± 5%     |  |
| 366-2SI                  | 0.7 - 0.7 N-M        | ± 10%    |  |
| 366-3SI                  | 0.02 - 0.2 N-M       | ± 10%    |  |

\*Accuracy % Full Scale Value Table 1.

The Series 366 Torque Watch is bidirectional, permitting clockwise or counterclockwise operation over the entire torque range. An internal rotation stop prevents damage from over-torque up to 3 times normal range.

A square drive shaft protrudes from the bottom of the unit to permit coupling to a test piece through one of three miniature adapter chucks furnished with the Series 366 Torque Watch. The adaptor chucks can accommodate shaft diameters from 0.010 to 0.218 in. (0.25 to 5.54 mm).

#### Chuck Preparation

Determine the shaft diameter of the test piece and select appropriate chuck. Refer to Table 2 below:

| Shaft Diameter |                 |                 |  |  |
|----------------|-----------------|-----------------|--|--|
| Chuck          | Minimum         | Maximum         |  |  |
| 366-A          | .010" (.25 mm)  | .030" (.76 mm)  |  |  |
| 366-B          | .300" (.76 mm)  | .094" (2.39 mm) |  |  |
| 366-C          | .094" (2.39 mm) | .218" (5.54 mm) |  |  |

Using appropriate size drill, preferably mounted in a small lathe, drill out the end of the chuck nearest the set screw to a depth of 0.187 in. (4.75 mm).

**Note:** Make certain the set screw is removed or backed out of the chuck before drilling the hole.

It is advisable to have a slight chamfer at the edge of the drilled hole to permit easy insertion of the test piece shaft into the chuck.

### Operation

- Place the chuck on the shaft of the test piece. Tighten the set screw with hex wrench provided.
- Switch the toggle on the Torque Watch to red (clock-

- wise) or black (counterclockwise) to set direction of rotation.
- To minimize test piece shaft friction caused by radial loads, mount or hold the test piece so its shaft is vertical.
- 4. Insert, but do not "bottom", the Torque Watch drive shaft in mating plate on chuck and turn the knurled shaft on the Torque Watch. When shaft of test piece moves, read torque value on the Torque Watch scale. See Figure 1.



Figure 1.

#### **Notes**

- When possible, operate the 366 in a vertical position, shaft down, to minimize errors caused by bearing friction.
- Do not bottom the Torque Watch drive shaft into the chuck. Permit the shaft to "float" in the chuck to avoid loading the bearings.
- Do not lubricate the Torque Watch jewel bearings.
- Additional chuck adapters are available from the factory.

| UNITS CONVERSION         |  |  |  |  |
|--------------------------|--|--|--|--|
|                          | Multiply   | Ву   | To Obtain  |  |
| English<br>To<br>English | Ounce Inches<br>Ounce Inches<br>Pound Inches<br>Pound Feet                   | 6.25 x 10 <sup>-2</sup><br>5.21 x 10 <sup>-3</sup><br>16<br>192  | Pound Inches Pound Feet Ounce Inches Ounce Inches                            |  |
| English<br>To<br>Metric  | Ounce Inches<br>Pound Inches<br>Ounce Inches<br>Pound Inches                 | 72<br>1152<br>720<br>11520   | Gram Centimeters<br>Gram Centimeters<br>Gram Millimeters<br>Gram Millimeters |  |
| Metric<br>To<br>Metric   | Gram Centimeters<br>Gram Millimeters<br>Gram Centimeter<br>Kg Centimeter     | 10<br>0.1<br>10 <sup>-3</sup><br>10 <sup>3</sup>   | Gram Millimeters<br>Gram Centimeters<br>Kg-cm<br>gm-cm                       |  |
| Metric<br>To<br>English  | Gram Centimeters<br>Gram Centimeters<br>Gram Millimeters<br>Gram Millimeters | 1.389 x 10 <sup>-2</sup><br>8.681 x 10 <sup>-4</sup><br>1.389 x 10 <sup>-3</sup><br>8.681 x 10 <sup>-5</sup> | Ounce Inches Pound Inches Ounce Inches Pound Inches                          |  |
| System<br>International  | Ounce Inches<br>Gram Centimeters<br>Newton-Meters<br>Newton-Meters           | 7.06 x 10 <sup>-3</sup><br>9.81 x 10 <sup>-5</sup><br>141.6<br>10197   | Newton-Meters<br>Newton-Meters<br>Ounce Inches<br>Gram Centimeters           |  |

#### WARRANTY/REMEDY

Honeywell warrants goods of its manufacture as being free of defective materials and faulty workmanship. Contact your local sales office for warranty information. If warranted goods are returned to Honeywell during the period of coverage, Honeywell will repair or replace without charge those items it finds defective. The foregoing is Buyer's sole remedy and is in lieu of all other warranties, expressed or implied, including those of merchantability and fitness for a particular purpose.

Specifications may change without notice. The information we supply is believed to be accurate and reliable as of this printing. However, we assume no responsibility for its use.

While we provide application assistance personally, through our literature and the Honeywell web site, it is up to the customer to determine the suitability of the product in the application.

### Honeywell

Sensing and Control Honeywell 100 Discovery Way Acton, MA 01720 USA

Tel: (877) 384-1300; Fax: (978) 263-0630



www.honeywell.com/sensing/products/di